

WildSonic manual: Get Started Faster



Link to the Detailed User Manual



Link to the config application

Required Resources:	Quickstart with WildSonic recorder:
<ul style="list-style-type: none">• Micro SD card: upto 2TB• Micro SD card Reader• 21700 Li-ion batteries (at least 2 and up to 5)• Battery Charger• Large-head Phillips #2 Screwdriver• Dry towel or moisture-absorbing cloth• A windows computer / laptop.	<ol style="list-style-type: none">1. Insert 21700 batteries (atleast 2 and upto 5)2. Insert a microSD card (upto 2TB) into the microSD card reader / laptop<ol style="list-style-type: none">a. Open the latest WildSonic config appb. Configure to the settings you need or leave at defaults.c. Save the config file onto the SD card3. Now insert the microSD card used above into the WildSonic recorder4. Turn ON the recorder using the Power switch5. Observe LED indications.

Product support:

Email: info@wildsonic.ai

Phone: +91-9902058989

Website: wildsonic.ai/support